■ Battery Powered Pruning Shears









Work amount on a full battery charge

When cutting ø15mm branches of Japanese cypress

8,000 pcs.

Battery: BL1860B

■ Cordless Pruning Saw







Work amount

Test conditions: Cut ø50mm cedar rod under an optimal pressing load of 20N or less on cutting edge. Saw chain: 80TXL

210 pcs. Battery: BL1830B

Accessories / Optional

Shear blade U/L set

Part No. 1916M8-3

Replacement upper and lower blades for Pruning shears



Long handle attachment set

Part No. 1916B3-6

Attach the tool to this handle for easy pruning in hard-to-reach places.



Dressing stone set

Part No. 1912E4-1

Dresser stone for Shear blade sharpening



Charging Time

18V United the page of the pag	DC18RC	DC18SD
*1 BL1815N 1.5Ah	15 min	30 min
*1 BL1820B 2.0Ah	24 min	45 min
*1 BL1830B 3.0Ah	22 min	60 min
*1 BL1840B 4.0Ah	36 min	90 min
*1 BL1850B 5.0Ah	45 min	110 min
*1 BL1860B 6.0Ah	55 min	130 min
BL1890 9.0Ah	85 min	200 _{min}
BL18120 12.0Ah	120 _{min}	265 _{min}

Cordless Pruning Shears DUP181

	Many anothing as an area of the	20 /1 2 /1 /
Brake	Max cutting capacity	30 mm (1-3/16")
	Time from fully open to fully closed	0.34 sec
Torque limiter	Circumference of grip portion	125 mm (4-7/8")
	Vibration level	2.5 m/s ² or less (EN62841-4-5)
	Uncertainty (K) for Vibration	1.5 m/s ² or less (EN62841-4-5)
	Sound pressure level	70 dB (A) or less (EN62841-4-5)
	Uncertainty (K) for Noise	3 dB (A) (EN62841-4-5)
	Dimensions (L x W x H)	300 x 75 x 113 mm (11-3/4 x 2-15/16 x
	(Battery)	BL1820B
	Net weight	1.1 - 2.1 kg (2.4 - 4.6 lbs.)
	(Battery)	BL1815N - BL18120

*1 Recommended battery

nt(s) for normal and safe-use and battery cartridge(s) which are specified in the instruction manual. The net weight value includes the lightest and heaviest combination of the attach





DUP181Z : Box wrench 13-782212-4(1), Hex. wrench 2.5-783208-8(1), Hex. wrench 4-783202-0(1) DUP181SF: Battery BL1830B - 197605-6(1), Box wrench 13-782212-4(1), Hex. wrench 2.5-783208-8(1), Hex. wrench 4-783202-0(1), DC18SD BATTERY CHARGER DC18SD(1)



Cordless Pruning Shears DUP181



Cordless comfort for sharp, smooth, and effortless pruning








Effortless pruning with clean, sharp cuts



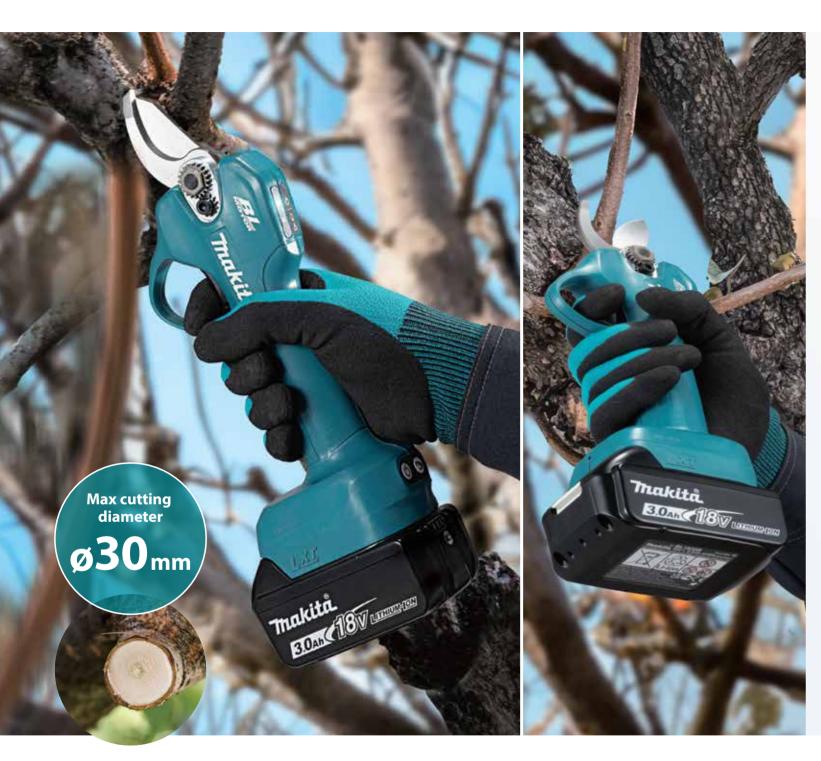





Standby mode

Convenient for temporarily storing the tool in a holster between tasks. Pull and hold the trigger for approx. 3 seconds to fully close the blade. (To return to normal mode, pull the trigger twice.)

Automatic power off When left unused for 5 minutes

Standby mode **Green lamp blinks** (Pull the trigger twice to resume.)

When left unused for 15 minutes Shuts down Green lamp turns off (To resume, press and hold the power

Cutting depth adjustment

Cutting depth can be adjusted after blade replacement. Close the upper blade and hold the angle adjustment button for more than 3 seconds.

Four adjustable opening angles to suit different branch sizes for enhanced efficiency



with the upper blade closed.

Angle adjustment button Press and hold this button to adjust the angle Ø10_{mm}

Ø18_{mm}







Blade oil can be applied from the outside without disassembly.

button, then pull the trigger twice.)



